



Real size pattern

※ Please copy and use!


— 裏布カット線
Back cloth cut line

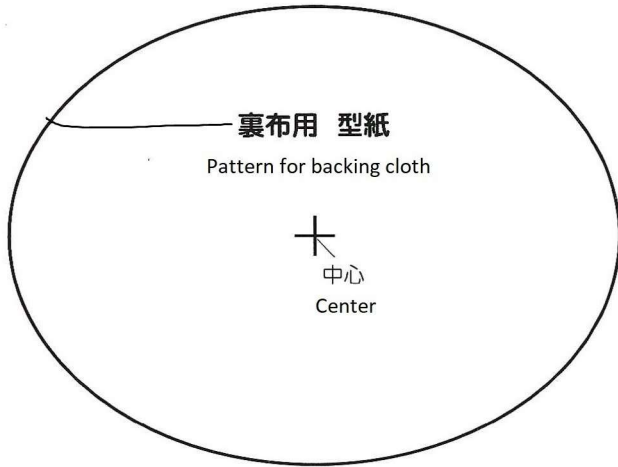


① Cut the cloth according to the cut line of the print. Cut the backing cloth according to the pattern.

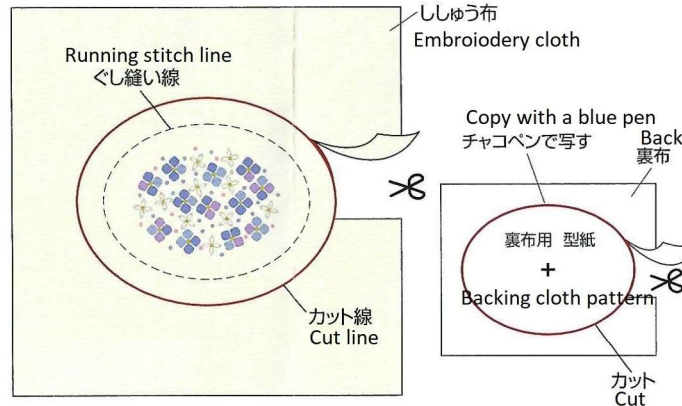


② Sew the circumference with hand-sewn thread along the print, insert a wrapping board and squeeze.

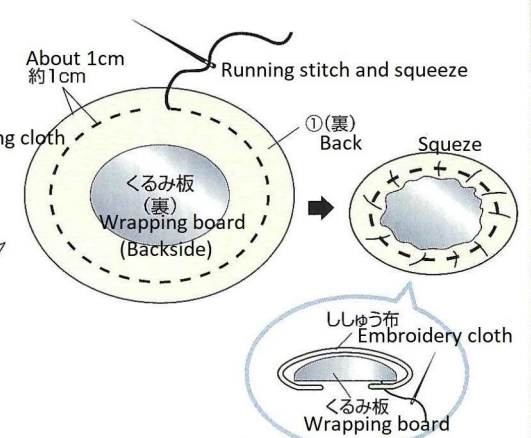



③ Similarly, insert thick paper into the backing cloth and the squeeze it. Insert the needle into the hole in the cardboard and sew the brooch pin

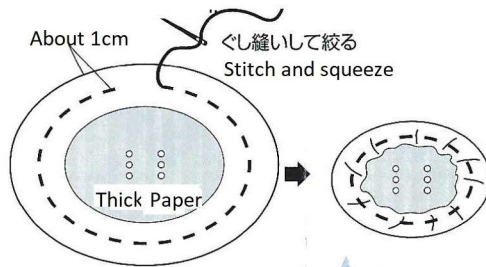


④ Apply ※glue around ②

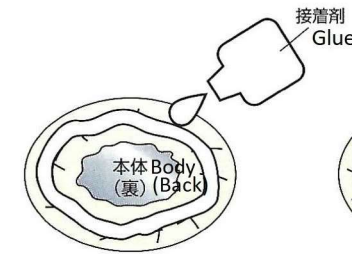

⑤ Paste ③ together

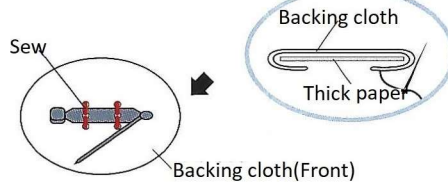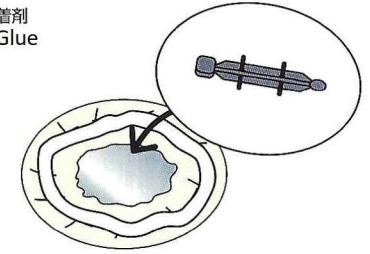

Finish

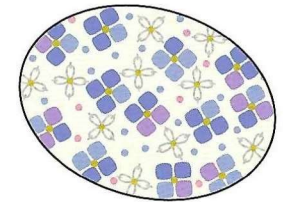

注意 Note

- ※ Hold it firmly until the adhesive dries.
- ※ "Synthetic rubber" adhesive is recommended for bonding the main body and the wrapping board.
- Do not use or store in places subject to water or high humidity. Leaving it wet or dirty may cause rust.